


Słupek do schodów

Stupek poręczy: blachownic

Słupki poręczy dachu

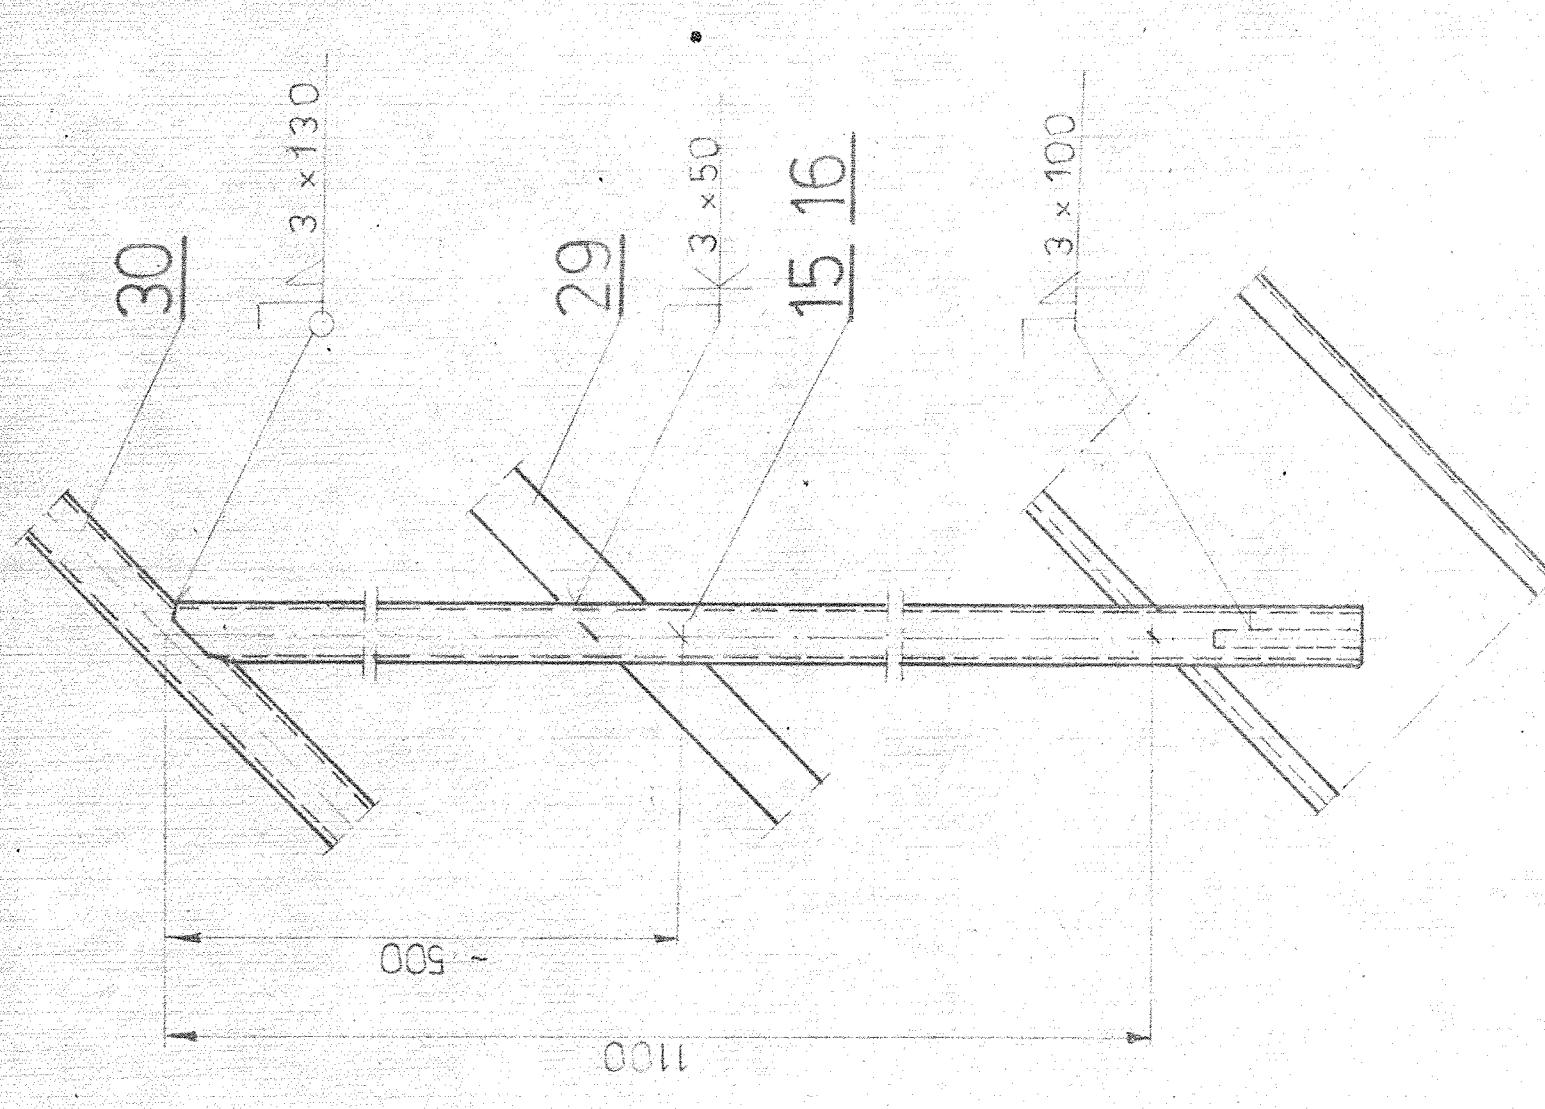

1. Płaskownik poz. 32 spawać do podestów

w odstępach ~1 m

2. Szczegóły montażowe wsporników na rys. HE-13-219-2

3. Kolanka poz. 20 - 23 przewidziano spawac' na

montazu

Czynko	Elektron	ET 340E 4GB	PN55, 6T13-22 PN54, M34 33	8,0 - 3	
90	- 25 x 6 x 24C	PN 72/H 33701	32	3353	255
1	- 60 x 6 x 65C	PN 72/H 33702	31	3354	32
1	Rupa 4332 x 2 x 200 mb	PN 73/H 33243	30	103X	4440
1	- 40 x 5 x 200 mb	PN 71/H 33702	29	3353	3740
1	bednarka 130 x 3 x 150 mb	PN 37/H 13303	28	3353	640
32	Pokładka okr 18	PN57, 187005	27	930	11
32	Pokładka okr 18	PN57, 187214	26	11	11
4	Truba M16x80 - 48 - III	PN73, 187205	25	36	36
78	Truba M16x44 - 48 - II	PN75, 187215	24	25	25
12	Kolumna balustrady	HE 13, 213 - 5	23	12,3	12,3
4	Kolumna balustrady	HE 13, 213 - 5	22	40	40
30	Kolumna balustrady	HE 13, 213 - 5	21	330	330
30	Kolumna balustrady	HE 13, 213 - 5	20	30	30
30	Kolumna balustrady	HE 13, 213 - 5	19	1950	1950
30	Kolumna balustrady	HE 13, 213 - 5	18	1740	1740
90	Stupek do balkonów	TE 12 - 05	17	230	230
40	Stupek do schodów	HE 13 - 187 - 2	16	1200	1200
40	Stupek do schodów	HE 13 - 187 - 2	15	1200	1200
8	Wspornik V wyk A	HE 13 - 213 - 5	14	360	360
8	Wspornik V wyk B	HE 13 - 213 - 5	13	226	226
2	Wspornik IV	HE 13 - 213 - 5	12	150	150
6	Wspornik III wyk B	HE 13 - 213 - 5	11	150	150
2	Wspornik III wyk A	HE 13 - 213 - 5	10	940	940
2	Wspornik II	HE 13 - 213 - 5	9	840	840
2	Wspornik I	HE 13 - 213 - 5	8	1300	1300
2	Schody A - H 220C	HE 13 - 187 - 1	7	191	191
4	Schody A - H 2600	HE 13 - 187 - 1	6	3500	3500
4	Schody B - H 2600	HE 13 - 187 - 1	5	3500	3500
6	Podest do schodów	TE 131 - 02 - 5A	4	5480	5480
6	Podest do schodów	TE 131 - 02 - 5A	3	5480	5480
4	Podest do obrot nap. el.	HE 13 - 219 - 1	2	1400	1400
4	Podest do obrot nap. el.	HE 13 - 219 - 1	1	1910	1910
	Podest do wozów LE 5700	HE 13 - 02 - 3/A			